


**Subject** ▶ Change on method of attaching Angular Guide

**For Models** ▶ 5091DZ,5091DWH,5091DWG,5092D,5092DW,4191DZ,4191DWA (Cordless Circular Saws and Cordless Cutters)

**Description** ▶ As illustrated below, method of attaching Angular Guide to Base has been changed from by rivet to by Pin and Stop Ring to make attaching and/or detaching easier.

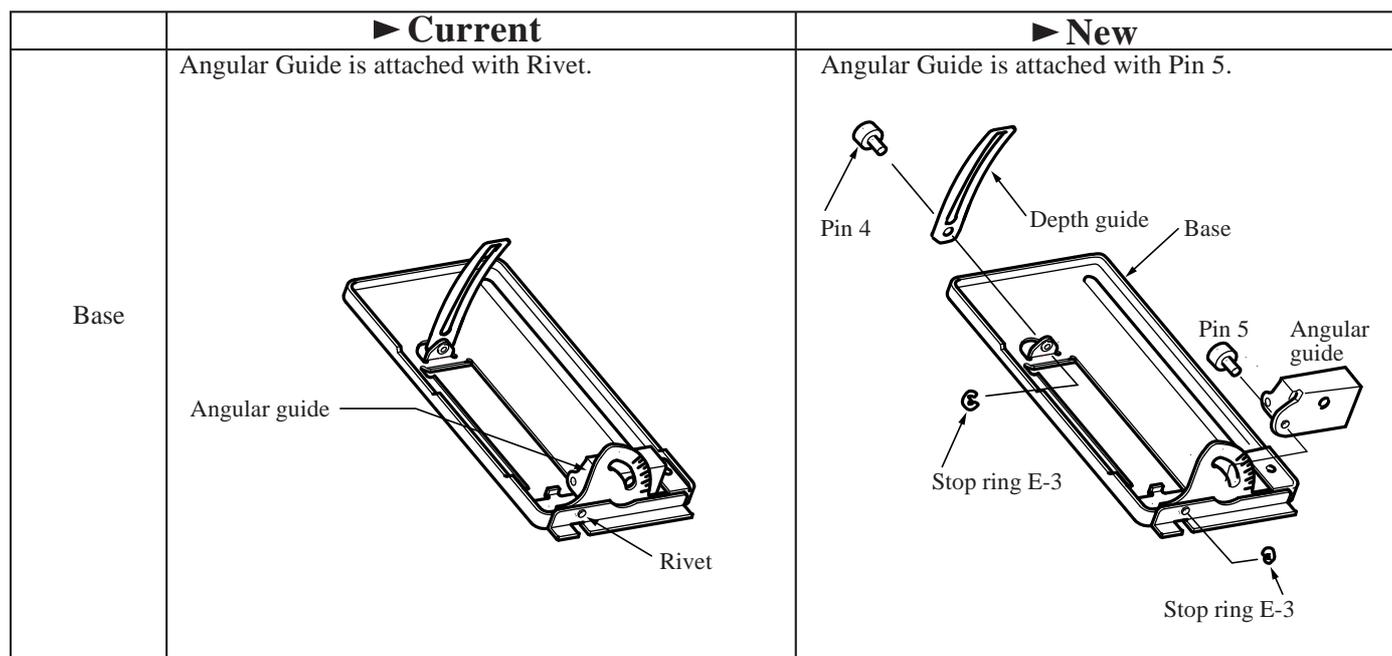

### Interchangeability(I/C)

Item No.	Current part		Q'ty	I/C	New part		Q'ty	
45	Base 168277-4		1	No	Base 168317-8		1	5091DZ,5091DWH, 5091DWG, 5092D,5092DW Interchangeable as a set
51					Angular Guide 344594-8		1	
52					Pin 5 268028-6		1	
53					Depth Guide 344592-2		1	
45					Pin 4 268004-0		1	
45					Stop Ring E-3 961017-7		2	
47	Base 168301-3		1	No	Base 168318-6		1	4191DZ,4191DWA Interchangeable as a set
65					Angular Guide 344595-6		1	
66					Pin 5 268028-6		1	
67					Depth Guide 344593-0		1	
68					Pin 4 268004-0		1	
69					Stop Ring E-3 961017-7		2	

## Implementation

5091DZ : From May, 1997  
5091DWH : From May, 1997  
5091DWG : From May, 1997  
5092D : From your next order  
5092DW : From your next order  
4191DZ : From May, 1997  
4191DWA : From May, 1997