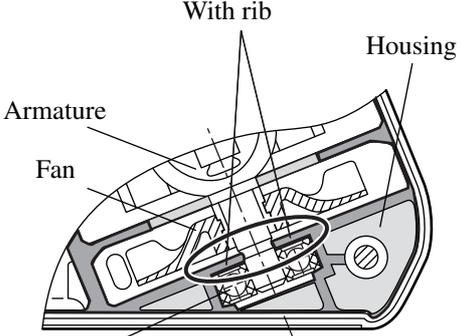
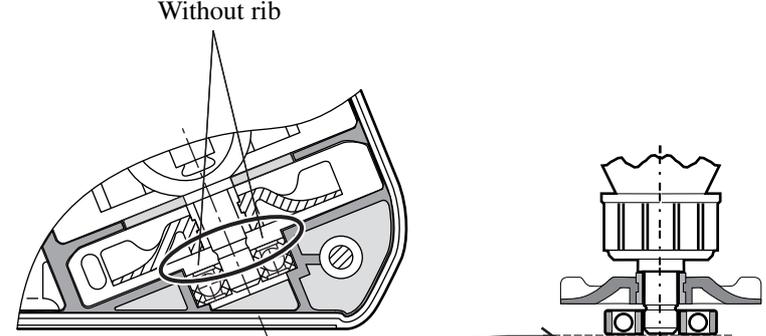


TECHNICAL INFORMATION

- Subject** ▶ Change in the Method of Attaching Ball Bearing 626DDW to Armature Shaft, and Modification of Housing Set
- For Models** ▶ BHR200
- Country** ▶ All countries
- Description** ▶
 1. The method of inserting the ball bearing to the armature shaft has been changed. Accordingly, the part number of the Armature Assembly has been changed.
 2. The Housing Set has been modified as illustrated below in order to accept the new Armature Assembly.

▶ Current	▶ New
<p style="text-align: center;">With rib</p>  <p style="text-align: center;">Ball Bearing 626DDW</p> <p>Armature Assembly is inserted into Ball Bearing 626DDW with gentle pressure.</p>	<p style="text-align: center;">Without rib</p>  <p>The armature shaft is machine-pressed into the ball bearing 626DDW.</p>

Interchangeability(I/C)

Item No.	Current part	Q'ty	I/C	New part	Q'ty	Note
062	Armature Assembly 24V 519060-6	1	No	Armature Assembly 24V 519066-4	1	1. Interchangeable as a set of the armature assembly and the housing set. 2. The new housing set comes with a Makita logo label.
050, 088	Housing Set 183247-2	1	No	Housing Set 183393-1	1	

Implementation

From serial No. 7735E (Nov.,2000)