

MODELS

C 6SF, C 6MF

C 7SF, C 7MF

Hitachi Power Tools


C

CIRCULAR SAWS

C 6SF, C 7SF

C 6MF, C 7MF

**TECHNICAL DATA
AND
SERVICE MANUAL**

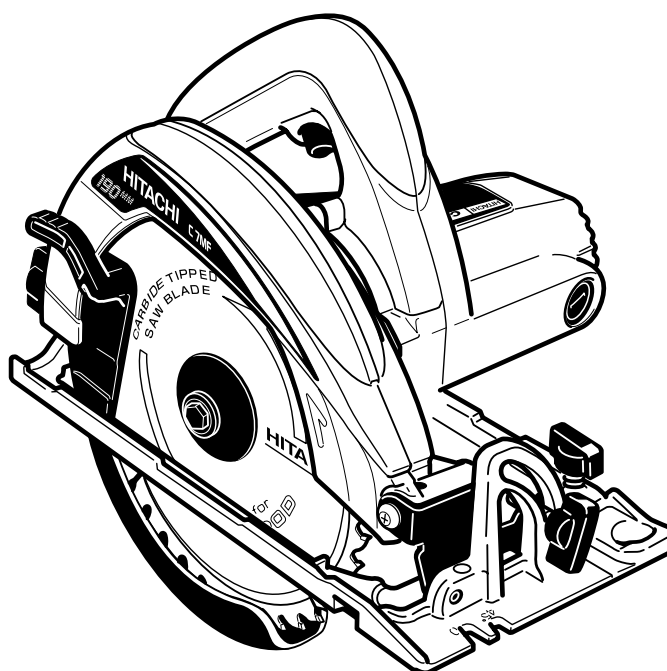

LIST Nos. C 6SF: 0597

C 7SF: 0598

C 6MF: 0599

C 7MF: E501

Feb. 2004

REMARK:

Throughout this TECHNICAL DATA AND SERVICE MANUAL, a symbol(s) is(are) used in the place of company name(s) and model name(s) of our competitor(s). The symbol(s) utilized here is(are) as follows:

C 6SF, C 6MF

Symbol Utilized	Competitor	
	Company Name	Model Name
C – 1	MAKITA	5606B

C 7SF, C 7MF

Symbol Utilized	Competitor	
	Company Name	Model Name
C – 2	MAKITA	5806B



CONTENTS

Page

1. PRODUCT NAME	1
2. MARKETING OBJECTIVE	1
3. APPLICATIONS	1
4. SELLING POINTS	1
4-1. Selling Point Descriptions	2
5. SPECIFICATIONS	3
6. COMPARISONS WITH SIMILAR PRODUCTS	4
7. PRECAUTIONS IN SALES PROMOTION	4
7-1. Handling Instructions	4
8. PRECAUTIONS IN DISASSEMBLY AND REASSEMBLY	5
8-1. Disassembly	5
8-2. Reassembly	8
8-3. Insulation Tests	11
8-4. Deflection of Saw Blade	11
8-5. Cleaning the Case	11
9. STANDARD REPAIR TIME (UNIT) SCHEDULES	12
Assembly Diagram for C 6SF	
Assembly Diagram for C 6MF	
Assembly Diagram for C 7SF	
Assembly Diagram for C 7MF	

1. PRODUCT NAME

Hitachi Circular Saw, Model C 6SF [165 mm (6-1/2")]

Hitachi Circular Saw, Model C 6MF [165 mm (6-1/2")]

Hitachi Circular Saw, Model C 7SF [190 mm (7-1/2")]

Hitachi Circular Saw, Model C 7MF [190 mm (7-1/2")]

2. MARKETING OBJECTIVE


Circular saw market in the South-East Asian countries are mainly demanding the heavy-duty machines for professionals. However, potential demands for reasonably priced and light-duty machines are seemed to be strong. We will expand selling the circular saws with reasonable price and high performance for South-East Asian countries to find a new market. The key features are as follows:

- (1) Provided with parallel adjustment system
- (2) Adopting lower guard made of plastic not to hurt the material to be cut
- (3) Adopting base made of aluminum which is strong and precise (only Models C 6MF and C 7MF)

3. APPLICATIONS

- Cutting of various wood materials
- Cutting of decorated laminate plates, thin plastic plates, soft construction materials (using the saw blade for plastic)

4. SELLING POINTS

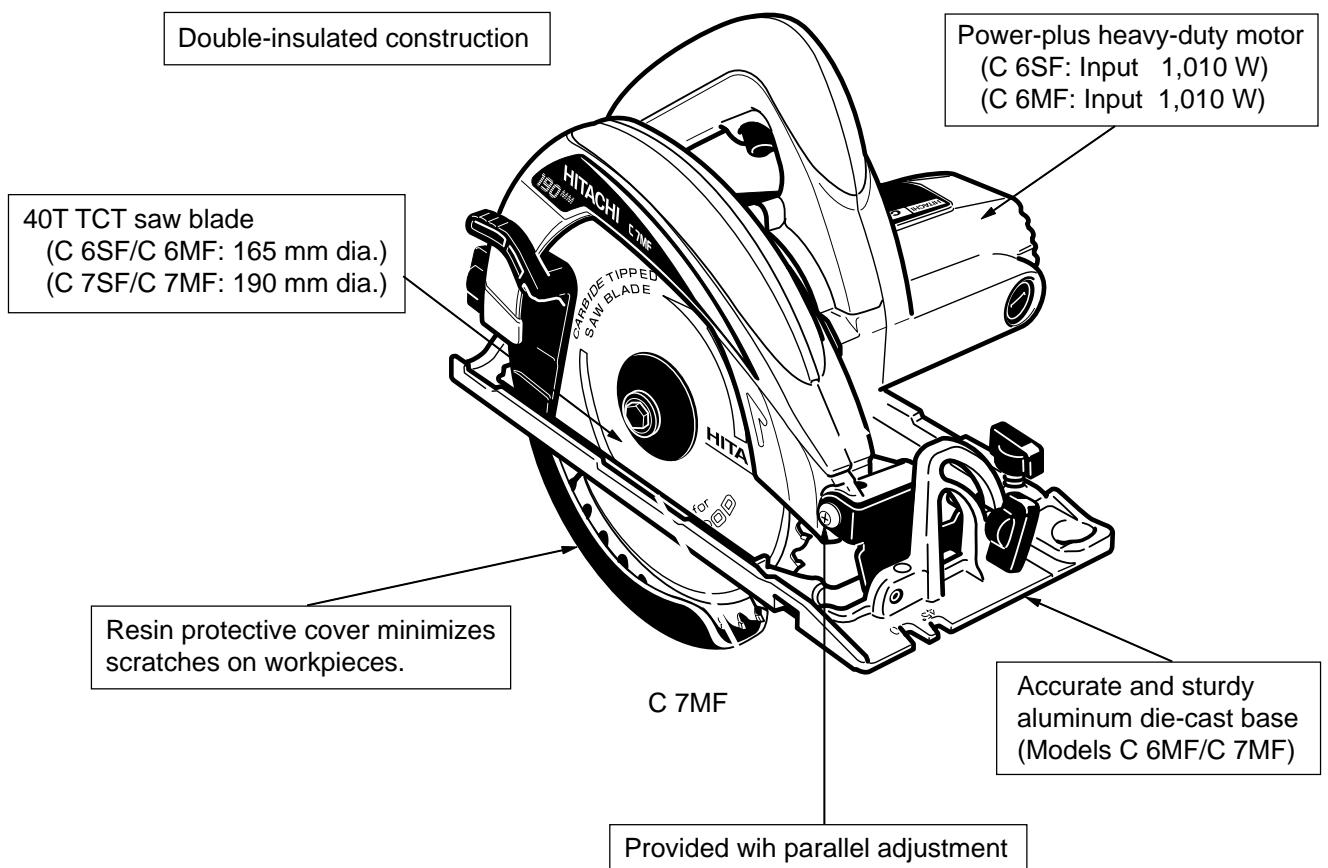

4-1. Selling Point Descriptions

(1) Parallel adjustment system

The parallelism can be easily fine-adjusted by using the parallel adjustment system. The parallelism may be slightly shifted when the cutting depth is adjusted. If the parallelism is shifted, adjust it according to the following procedure.

- (a) Loosen the locking screw of the saw cover hinge (Fig. 1).
- (b) Draw the protective cover in the saw cover.
- (c) Hold a piece of wood to the rear of the base and put a mark on the piece of wood at the side of the base (Fig. 2).
- (d) Move the marked piece of wood to the front of the base and turn the parallel adjustment screw until the mark aligns with the side of the base (Fig. 3).
- (e) After adjustment, tighten the locking screw securely.

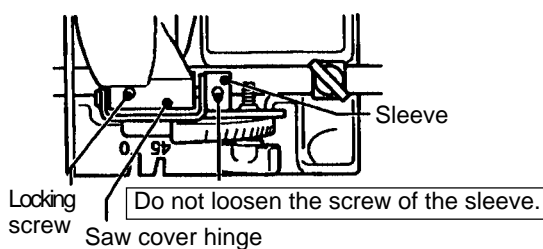


Fig. 1

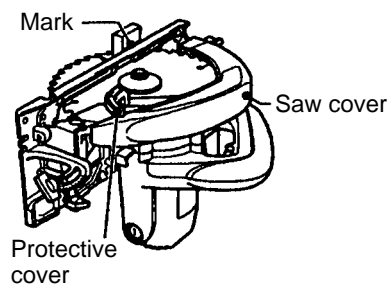


Fig. 2

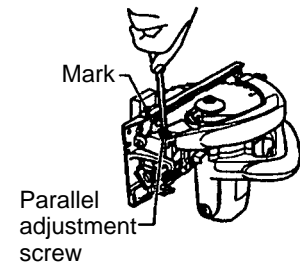


Fig. 3

(2) Resin protective cover minimizes scratches on workpieces

The lightweight and smooth protective cover is made of resin and minimizes scratching on workpieces.

(3) Power-plus heavy-duty motor (Models C 6SF/C 6MF)

Powerful motor provides greater input and output than those of the Model C 6SE.

(4) Accurate and sturdy aluminum die-cast base (Models C 6MF/C 7MF)

Thanks to the sturdy aluminum die-cast base, the Models C 6MF/C 7MF can cut workpieces accurately and the cut surfaces of the workpieces are smooth.

(5) High performance 40-tooth tungsten carbide tipped (TCT) saw blade as standard

High performance TCT saw blade (40 teeth) is provided as standard instead of the conventional combination blade. The Models C 6SF, C 6MF, C 7SF and C 7MF provide greater maximum cutting depth than the conventional models by using a 165 mm dia. TCT saw blade and a 190 mm dia. TCT saw blade respectively.

(6) Double-insulated construction


Grounding is not required thanks to the double-insulated construction.

5. SPECIFICATIONS

Model		C 6SF	C 6MF	C 7SF	C 7MF
Saw blade diameter		165 mm (6-1/2")		190 mm (7-1/2")	
Cutting depth	at 90°	0 – 57 mm (0 – 2-1/4")		0 – 68 mm (0 – 2-11/16")	
	at 45°	Max. 38 mm (1-1/2")		Max. 46 mm (1-13/16")	
Power source		AC single phase 50/60 Hz			
Type of motor		AC single phase commutator			
Type of switch		Trigger switch			
Enclosure	Housing	Polycarbonate resin			
	Handle cover				
	Gear cover	Cast aluminum			
	Lower guard	Polycarbonate resin			
	Base	Sheet metal	Cast aluminum	Sheet metal	Cast aluminum
* Voltage (V)		220	230	220	230
* Current (A)		4.8	4.6	5.0	4.8
Power input		1,010 W		1,050 W	
Rotation speed	No-load	5,400/min		5,530/min	
	Full-load	4,070/min		4,000/min	
Weight	Net	3.0 kg (6.6 lbs)		3.3 kg (7.3 lbs)	
	Gross	4.3 kg (9.5 lbs)		4.7 kg (10.4 lbs)	
Packaging		Corrugated cardboard box			
Cord	Type	Two-core cabtire cable			
	Overall length	2.5 m (8.2 ft.)			
Standard equipment		• Tungsten carbide tipped (TCT) saw blade 1 • Box wrench 1 • Parallel guide 1 • Hex. bar wrench 1			

* Check the tool name plate to confirm the rating, as it is subject to change by area.

6. COMPARISONS WITH SIMILAR PRODUCTS

Maker			HITACHI	C – 1	HITACHI	C – 2
Model			C 6SF/C 6MF		C 7SF/C 7MF	
Catalog specifications	Saw blade diameter		mm	165 (6-1/2")	160 (6-1/4")	190 (7-1/2")
	Max. cutting depth	90°	mm	57 (2-1/4")	55 (2-5/32")	68 (2-11/16")
		45°		38 (1-1/2")	36 (1-3/8")	46 (1-13/16")
	Power input		W	1,010	950	1,050
	No-load rotation speed		/min	5,000	4,700	5,000
	Overall length		mm	270/282	268	282/295
	Weight		kg	3.0 (6.6 lbs)	3.3 (7.3 lbs)	3.3 (7.3 lbs)
Characteristics*	No-load rotation speed		/min	5,400	5,400	5,530
	Full-load rotation speed		/min	4,070	3,660	4,000
	Full-load output		W	550	545	590
	Max. output		W	1,500	1,340	1,500
	No-load noise		dB	84	82	84
Structure	Parallel adjustment		–	Provided	None	Provided
	Material of base		–	Steel/Aluminum	Steel	Steel/Aluminum
	Material of lower guard		–	Plastic	Steel	Plastic
	Material of wing bolt/nut		–	Plastic	Steel	Plastic
		L	mm	270/282	268	282/295
		H	mm	229	230	242
		W	mm	210	225	210

* Figures are based on 230 V motors

7. PRECAUTIONS IN SALES PROMOTION

In the interest of promoting the safest and most efficient use of the Models C 6SF, C 6MF, C 7SF and C 7MF Circular Saws by all of our customers, it is very important that at the time of sale the salesperson carefully ensures that the buyer seriously recognizes the importance of the contents of the Handling Instructions.

7-1. Handling Instructions

Although every effort is made in each step of design, manufacture, and inspection to provide protection against safety hazards, the dangers inherent in the use of any electric tool cannot be completely eliminated. Accordingly, general precautions and suggestions for the use of electric power tools, and specific precautions and suggestions for the use of the circular saw are listed in the Handling Instructions to enhance the safe and efficient use of the tool by the customer. Salespersons must be thoroughly familiar with the contents of the Handling Instructions to be able to offer appropriate guidance to the customer during sales promotion.

8. PRECAUTIONS IN DISASSEMBLY AND REASSEMBLY

The procedures for disassembly and reassembly and certain precautions are described below.

The **[Bold]** numbers in the descriptions below correspond to the item numbers in the parts list for all the models.

In disassembly or reassembly and also in other work, the Base Ass'y **[52]** should be carefully handled to prevent the loss of the accuracy of each part, such as the flatness of the bottom surface.

8-1. Disassembly

Before disassembly, be sure to remove the saw blade to prevent damage to the cutting edge or injuries by the saw blade.

(1) Removing the Protective Cover **[5]**

- (a) Detach the hook of the Return Spring **[6]** from the Protective Cover **[5]**.
- (b) Loosen the Seal Lock Flat Hd. Screw M3 x 12 **[9]** securing the Bearing Cover **[8]**, and remove the Bearing Cover **[8]** and the Protective Cover **[5]**.

(2) Removing the Bearing Holder **[3]**

Loosen the Seal Lock Flat Hd. Screw M5 x 12 **[4]**, remove the Bearing Holder **[3]** together with the Spindle and Gear Set **[2]**.

(3) Removing the Spindle and Gear Set **[2]** (See Fig. 4.)

Hold the bearing holder in a cylindrical jig with an inside diameter of 42 mm to 43 mm (approx. 1-23/32"), and remove it by pushing the end of the spindle.

Important: A gear, once removed, cannot be used again because it no longer engages. It must be replaced by a new spindle and gear set.

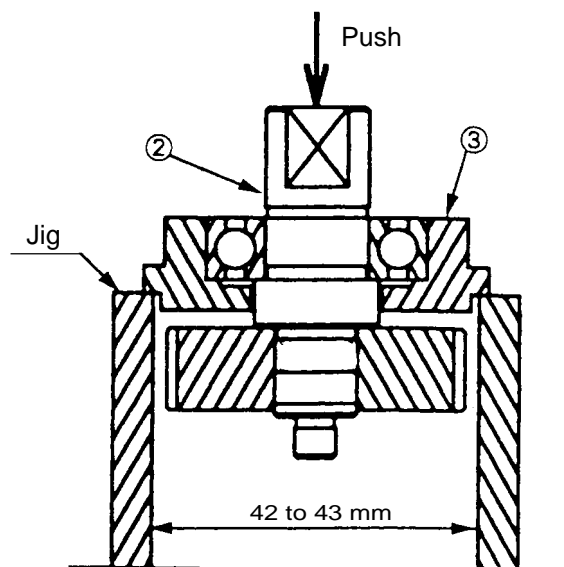


Fig. 4

(4) Removing the Housing Ass'y **[17]**

- (a) Loosen the Brush Caps **[34]** with a flat-blade screwdriver and remove the Carbon Brushes **[33]**.
- (b) Loosen the Machine Screws (W/Washers) M5 x 45 (Black) **[14]** securing the Housing Ass'y **[17]**, and remove the Housing Ass'y **[17]** and Gear Cover Ass'y **[29]**.

(5) Removing the Armature [24] (Fig. 5)

(a) Remove the Lock Lever [25] and tap the end surface of the Housing Ass'y [17] with a wooden hammer.

The Armature [24] and Fan Guide [23] can then be removed.

(b) Remove the Fan Guide [23], Thrust Washer [19] and Bearing Lock [18].

(c) Remove the Ball Bearing 6000VVCMP2L [26] and Ball Bearing 608VVC2PS2L [20] with a bearing puller.

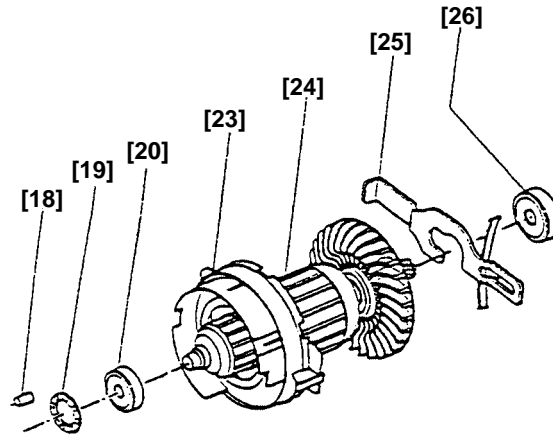


Fig. 5

(6) Removing the Stator Ass'y [22] (Fig. 6)

(a) Loosen the two Hex. Hd. Tapping Screws D5 x 55 [40].

(b) Remove the two Brush Terminals [21] from the brush holders of the Housing Ass'y [17].

(c) Lightly tap the end surface of the Housing Ass'y [17] with a wooden hammer to remove the Stator Ass'y [22].

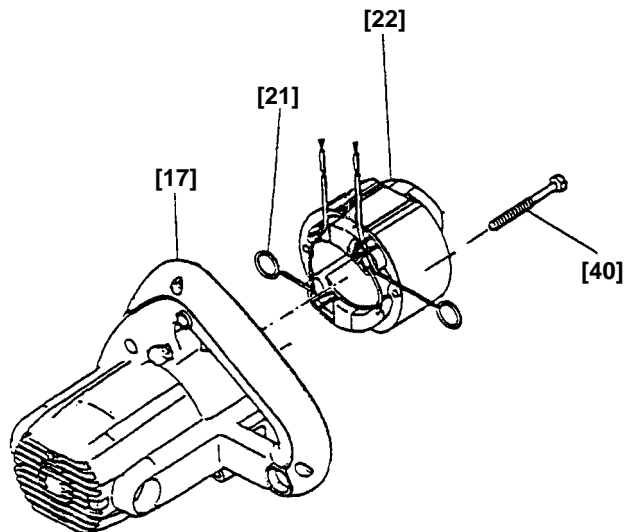


Fig. 6

(7) Removing the Base Ass'y [52] (Fig. 7)

- (a) Remove the Bolt Ass'y (Square) M6 x 22 [44].
- (b) Loosen the two Hex. Socket Set Screw M5 x 6 [28] of the Gear Cover Ass'y [29] and the hex. socket screw in the Sleeve [50] to remove the Sleeve [50].
- (c) Loosen Adjusting Screw (A) [53] and remove it from the Gear Cover Ass'y [29]. Then the Base Ass'y [52] can be removed.

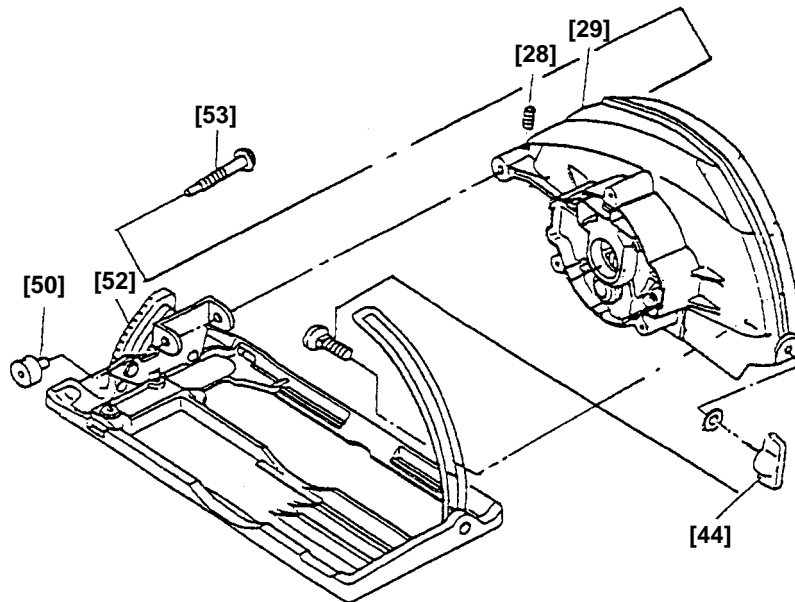


Fig. 7

8-2. Reassembly

Cautions on installation

Reassembly can be accomplished by following the disassembly procedures reverse. However, particular attention should be given to the following points:

(1) Assembling the Bearing Lock [18] and Thrust Washer [19] (See Fig. 8.)

Before installing the Armature [24], be sure to install the Bearing Lock [18] and Thrust Washer [19] in the bearing chamber of the Housing Ass'y [17] in this order. When installing the Thrust Washer [19], be sure to note its assembling direction.

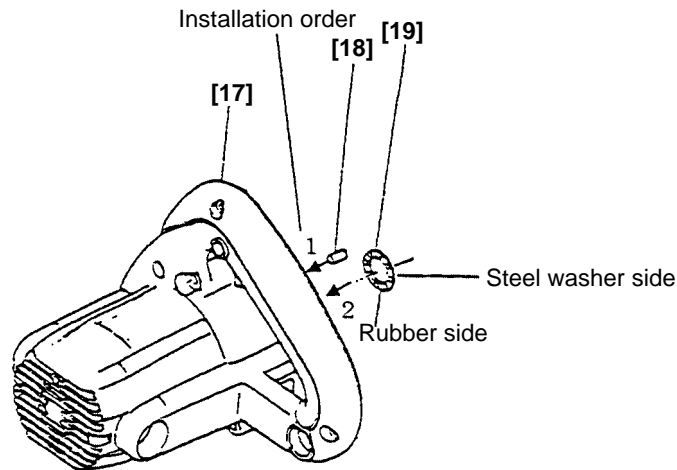


Fig. 8

(2) Assembling the Rubber Ring [27]

When installing the Rubber Ring [27], be careful not to damage the bearing chamber groove of the Gear Cover Ass'y [29].

(3) Assembling the Stator Ass'y [22]

As shown in Fig. 9, insert a guide bar [J-132 stator press pins (special repair tool, Code No. 970911) are recommended] into the Stator Ass'y [22] and the Housing Ass'y [17] to accurately align the screw hole on the Stator Ass'y [22] with the corresponding hole on the Housing Ass'y [17]. Press-fit the Stator Ass'y [22] into the Housing Ass'y [17]. Hook the carbon brush terminals in the brush holders. Be careful not to put the internal wires in the ribs of the Stator Ass'y [22] in the Housing Ass'y [17]. Fix the Stator Ass'y [22] to the Housing Ass'y [17] with the two Hex. Hd. Tapping Screws D5 x 55 [40].

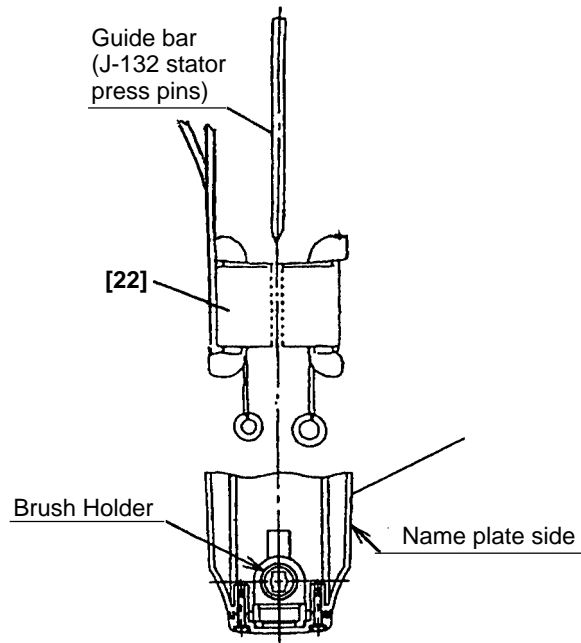


Fig. 9

(4) Assembling the Lock Lever [25] (See Fig. 10.)

- (a) Place the notch of the Lock Lever [25] between the fan of the Armature [24] and the ball bearing, and assemble them into the Gear Cover Ass'y [29]. At this time, both ends of the plate spring of the Lock Lever [25] should be supported by the inner sides of the ribs (2 places) of the Gear Cover Ass'y [29].
- (b) After installation, check the operation of the Lock Lever [25] to particularly ensure that the lever springs back to its original position when you let go of it.

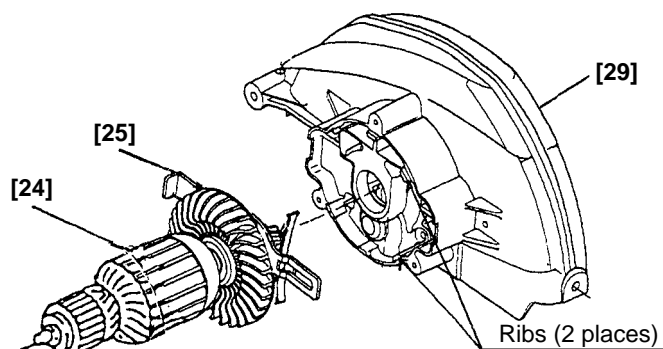


Fig. 10

(5) Wiring procedure (See Figs. 11 and 12.)

Wiring should be carried out by referring to Figures 11 and 12. During installation, be careful not to pinch the lead wires between the housing and the handle cover.

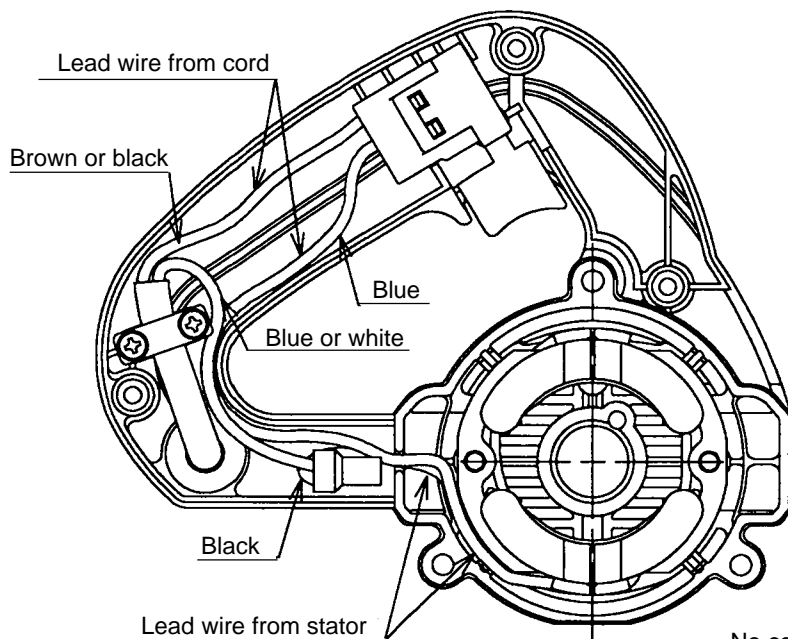


Fig. 11

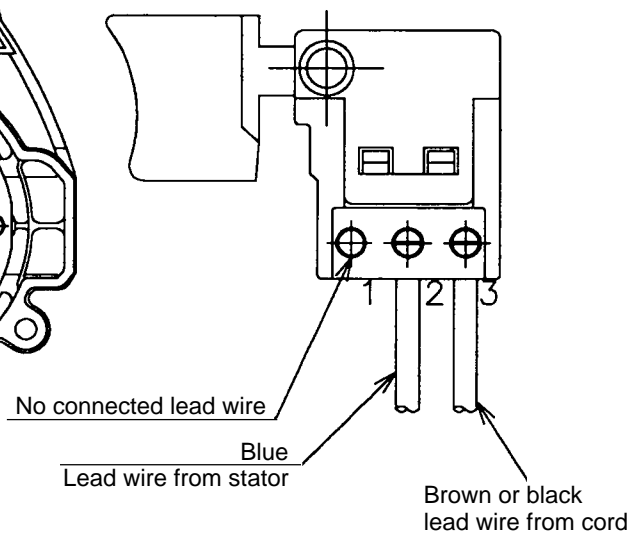


Fig. 12 (Expanded drawing of switch)

(6) Wiring diagram (See Fig. 13.)

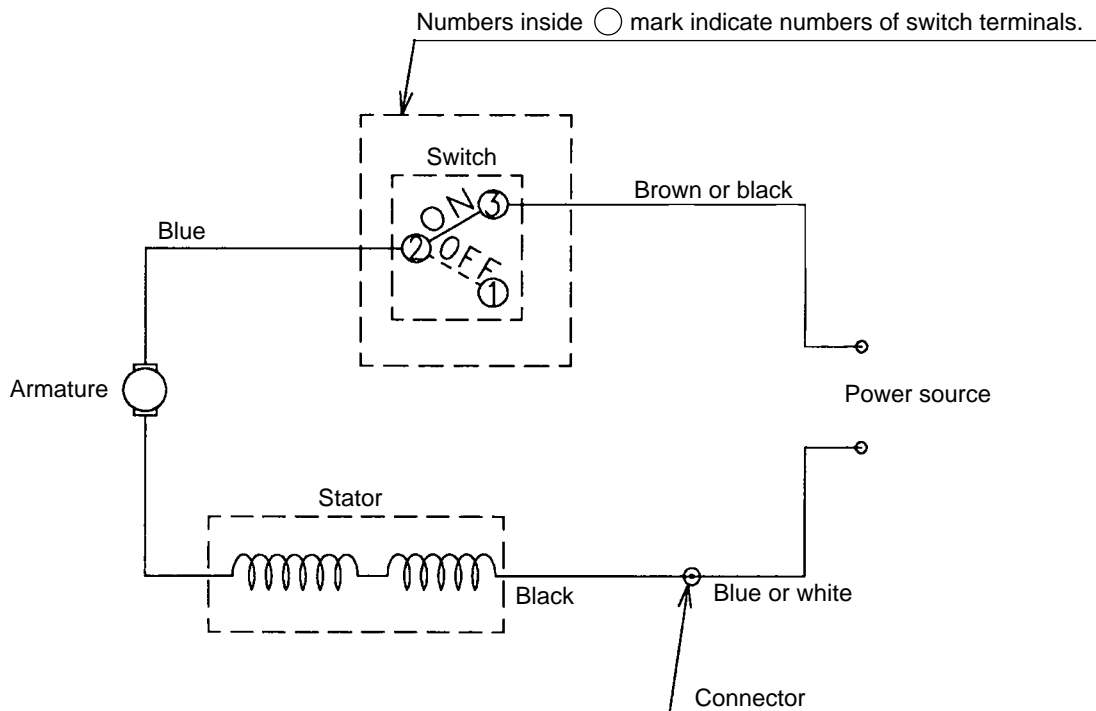


Fig. 13

(7) Tightening torque values for selected fasteners

- Bolt (W/Washer) M7 x 17.5 [13] $9.8 \pm 2.0 \text{ N}\cdot\text{m}$ ($100 \pm 20 \text{ kgf}\cdot\text{cm}$)
- Seal Lock Flat Hd. Screw M5 x 12 [4] $3.4 \pm 0.7 \text{ N}\cdot\text{m}$ ($35 \pm 7 \text{ kgf}\cdot\text{cm}$)
- Seal Lock Flat Hd. Screw M3 x 12 [9] $1.8 \pm 0.4 \text{ N}\cdot\text{m}$ ($18 \pm 4 \text{ kgf}\cdot\text{cm}$)
- Machine Screws (W/Washers) M5 x 45 [14] $3.4 \pm 0.7 \text{ N}\cdot\text{m}$ ($35 \pm 7 \text{ kgf}\cdot\text{cm}$)
- Hex. Hd. Tapping Screws D5 x 55 [40] $2.9 \pm 0.5 \text{ N}\cdot\text{m}$ ($30 \pm 5 \text{ kgf}\cdot\text{cm}$)
- Tapping Screws (W/Flange) D4 [15] [39] $2.0 \pm 0.5 \text{ N}\cdot\text{m}$ ($20 \pm 5 \text{ kgf}\cdot\text{cm}$)
- Hex. Socket Set Screws M5 x 6 [28] $3.4 \pm 0.7 \text{ N}\cdot\text{m}$ ($35 \pm 7 \text{ kgf}\cdot\text{cm}$)
- Brush Caps [34] $0.7 \pm 0.2 \text{ N}\cdot\text{m}$ ($7.5 \pm 2.5 \text{ kgf}\cdot\text{cm}$)
- Hex. Socket Set Screws M5 x 8 [31] $0.7 \pm 0.2 \text{ N}\cdot\text{m}$ ($7.5 \pm 2.5 \text{ kgf}\cdot\text{cm}$)
- Flat Hd. Screw M6 x 20 [42] $0.7 \pm 0.2 \text{ N}\cdot\text{m}$ ($7.5 \pm 2.5 \text{ kgf}\cdot\text{cm}$)
- Seal lock hex. socket hd. screw M6 for Sleeve [50] $3.4 \pm 0.7 \text{ N}\cdot\text{m}$ ($35 \pm 7 \text{ kgf}\cdot\text{cm}$)
- Set screws M3.5 x 7.5 for Switch (1P Pillar Type) W/Lock [46] ... $0.3^{+0.07}_{-0.05} \text{ N}\cdot\text{m}$ ($3^{+0.75}_{-0.5} \text{ kgf}\cdot\text{cm}$)

8-3. Insulation Tests

On completion of disassembly and repair, measure the insulation resistance and conduct dielectric strength test.

Insulation resistance: 7 M Ω or more with DC 500 V megohm tester

Dielectric strength: AC 4000 V/1 minute, with no abnormalities

8-4. Deflection of Saw Blade

Allowable deflection level of the saw blade shall be as follows.

Model	Measuring point	Allowable level
C 6SF, C 6MF, C 7SF, C 7MF	150	0.3 mm max.

8-5. Cleaning the Case

When the unit becomes soiled, clean it with a clean soft rag moistened with soapy water. Since chloric solvents, gasoline and thinner tend to melt plastic material, their use for cleaning is absolutely avoided.

9. STANDARD REPAIR TIME (UNIT) SCHEDULES


MODEL	Variable		10	20	30	40	50	60 min.
	Fixed							
C 6SF C 7SF C 6MF C 7MF	General Assembly	Work Flow						
		Switch						
		Handle Cover						
		Cord						
		Cord Armor						
		Protective Cover	Armature					
		Return Spring	Ball Bearing (608VV)					
			Ball Bearing (6000VV)					
			Spindle and Gear Set					
			Bearing Holder					
			Metal					
			Ball Bearing (6002VV)					
			Gear Cover Ass'y					
		Base Ass'y						

ELECTRIC TOOL PARTS LIST

■ CIRCULAR SAW Model C 6SF

2003 • 12 • 25

(E1)

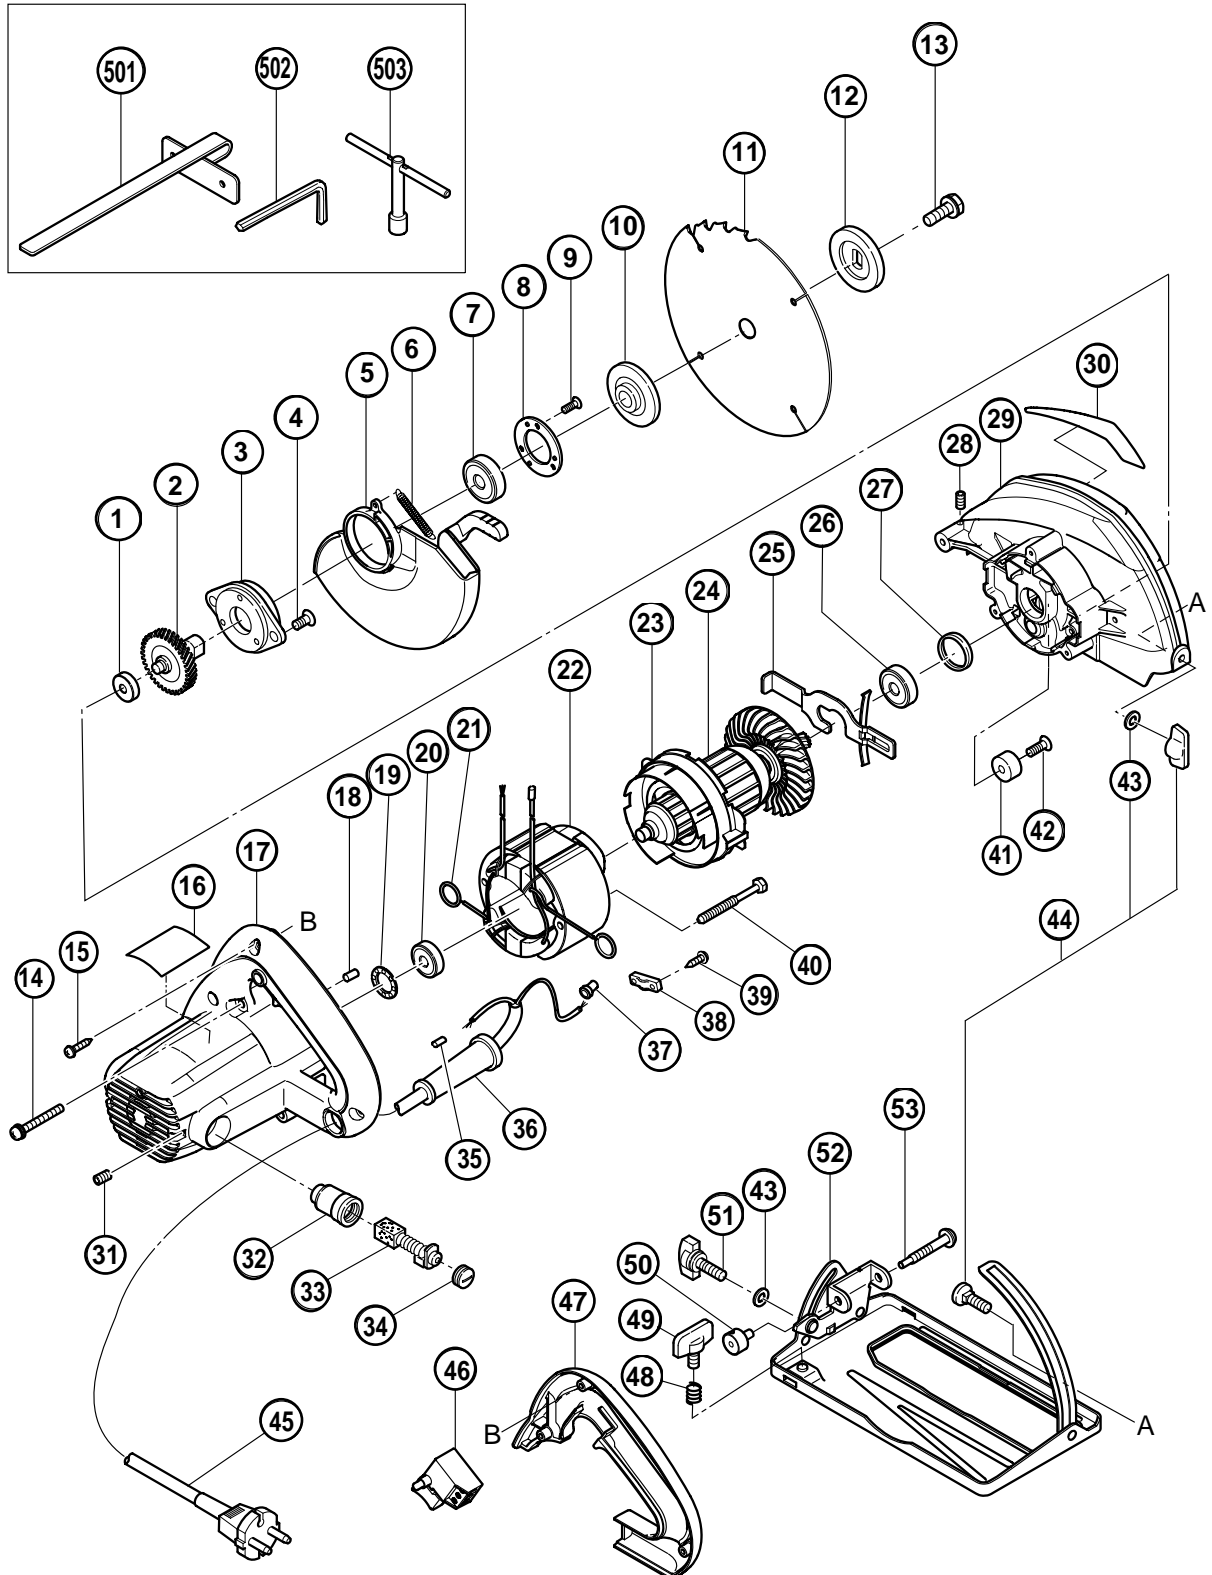

PARTS

C 6SF

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	963-803	METAL	1		
2	322-088	SPINDLE AND GEAR SET	1		
3	308-361	BEARING HOLDER	1		
4	305-568	SEAL LOCK FLAT HD. SCREW M5X12	2		
5	322-506	PROTECTIVE COVER	1		
6	317-203	RETURN SPRING	1		
7	600-2VV	BALL BEARING 6002VVCMP2L	1		
8	308-362	BEARING COVER	1		
9	308-773	SEAL LOCK FLAT HD. SCREW M3X12	3		
10	322-099	WASHER (A)	1		
11		TCT SAW BLADE 165MM-D20 HOLE-NT40	1		
12	322-100	WASHER (B)	1		
13	957-749	BOLT (W/WASHER) M7X17.5	1		
14	302-434	MACHINE SCREW (W/WASHERS) M5X45 (BLACK)	3		
15	301-653	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	3		
16		NAME PLATE	1		
17	322-504	HOUSING ASS'Y	1	INCLUD. 31, 32	
18	931-701	BEARING LOCK	1		
19	316-394	THRUST WASHER	1		
20	608-VVM	BALL BEARING 608VVC2PS2L	1		
21	930-703	BRUSH TERMINAL	2		
22	340-571E	STATOR ASS'Y 220V-230V	1	INCLUD. 21	
23	322-002	FAN GUIDE	1		
24	360-624E	ARMATURE 220V-230V	1		
25	307-918	LOCK LEVER	1		
26	600-0VV	BALL BEARING 6000VVCMP2L	1		
27	957-754	RUBBER RING	1		
28	962-782	HEX. SOCKET SET SCREW M5X6	1		
29	322-004	GEAR COVER ASS'Y	1	INCLUD. 27, 41, 42	
30		HITACHI LABEL	1		
31	938-477	HEX. SOCKET SET SCREW M5X8	2		
32	957-051	BRUSH HOLDER	2		
33	999-043	CARBON BRUSH (1 PAIR)	2		
34	935-829	BRUSH CAP	2		
35	981-373	TUBE (D)	1		
36	953-327	CORD ARMOR D8.8	1		
37	959-140	CONNECTOR 50091 (10 PCS.)	1		
38	937-631	CORD CLIP	1		
39	984-750	TAPPING SCREW (W/FLANGE) D4X16	2		
40	953-174	HEX. HD. TAPPING SCREW D5X55	2		
41	961-729	CUSHION	1		
42	949-794	FLAT HD. SCREW M6X20 (10 PCS.)	1		
43	948-167	SUPER LOCK WASHER M6	2		
44	314-620	BOLT ASS'Y (SQUARE) M6X22	1	INCLUD. 43	
* 45	500-468Z	CORD	1	(CORD ARMOR D8.8)	
* 45	500-234Z	CORD	1	(CORD ARMOR D8.8) FOR INA	
* 45	500-423Z	CORD	1	(CORD ARMOR D8.8) FOR SIN, MAL	
* 45	500-435Z	CORD	1	(CORD ARMOR D8.8) FOR HKG	
46	322-578	SWITCH (1P PILLAR TYPE) W/LOCK	1		
47	322-505	HANDLE COVER	1		
48	941-056	SPRING	1		

PARTS

C 6SF

[illegible]

STANDARD ACCESSORIES

C 6SF

[illegible]

OPTIONAL ACCESSORIES


[illegible]

ELECTRIC TOOL PARTS LIST

■ CIRCULAR SAW Model C 6MF

2003 • 12 • 25

(E1)

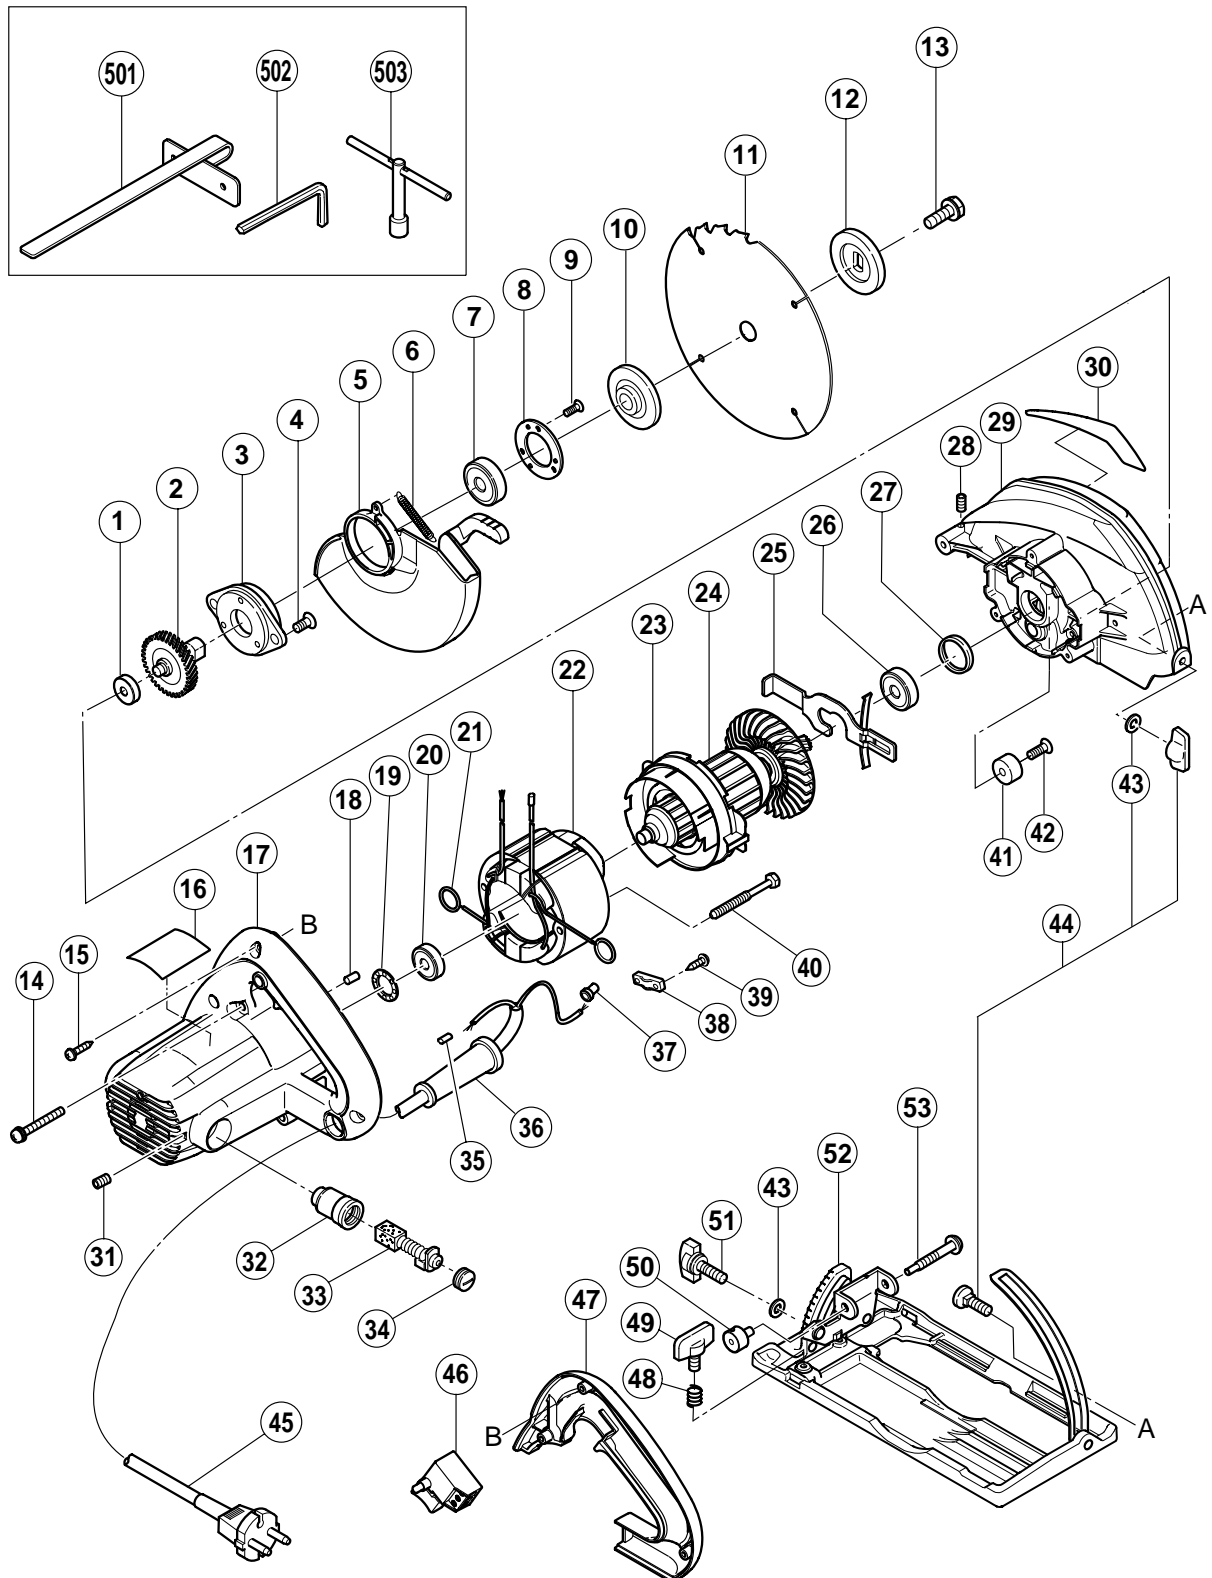

PARTS

C 6MF

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	963-803	METAL	1		
2	322-088	SPINDLE AND GEAR SET	1		
3	308-361	BEARING HOLDER	1		
4	305-568	SEAL LOCK FLAT HD. SCREW M5X12	2		
5	322-506	PROTECTIVE COVER	1		
6	317-203	RETURN SPRING	1		
7	600-2VV	BALL BEARING 6002VVCMP2L	1		
8	308-362	BEARING COVER	1		
9	308-773	SEAL LOCK FLAT HD. SCREW M3X12	3		
10	322-099	WASHER (A)	1		
11		TCT SAW BLADE 165MM-D20 HOLE-NT40	1		
12	322-100	WASHER (B)	1		
13	957-749	BOLT (W/WASHER) M7X17.5	1		
14	302-434	MACHINE SCREW (W/WASHERS) M5X45 (BLACK)	3		
15	301-653	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	3		
16		NAME PLATE	1		
17	322-504	HOUSING ASS'Y	1	INCLUD. 31, 32	
18	931-701	BEARING LOCK	1		
19	316-394	THRUST WASHER	1		
20	608-VVM	BALL BEARING 608VVC2PS2L	1		
21	930-703	BRUSH TERMINAL	2		
22	340-571E	STATOR ASS'Y 220V-230V	1	INCLUD. 21	
23	322-002	FAN GUIDE	1		
24	360-624E	ARMATURE 220V-230V	1		
25	307-918	LOCK LEVER	1		
26	600-0VV	BALL BEARING 6000VVCMP2L	1		
27	957-754	RUBBER RING	1		
28	962-782	HEX. SOCKET SET SCREW M5X6	1		
29	322-004	GEAR COVER ASS'Y	1	INCLUD. 27, 41, 42	
30		HITACHI LABEL	1		
31	938-477	HEX. SOCKET SET SCREW M5X8	2		
32	957-051	BRUSH HOLDER	2		
33	999-043	CARBON BRUSH (1 PAIR)	2		
34	935-829	BRUSH CAP	2		
35	981-373	TUBE (D)	1		
36	953-327	CORD ARMOR D8.8	1		
37	959-140	CONNECTOR 50091 (10 PCS.)	1		
38	937-631	CORD CLIP	1		
39	984-750	TAPPING SCREW (W/FLANGE) D4X16	2		
40	953-174	HEX. HD. TAPPING SCREW D5X55	2		
41	961-729	CUSHION	1		
42	949-794	FLAT HD. SCREW M6X20 (10 PCS.)	1		
43	948-167	SUPER LOCK WASHER M6	2		
44	314-620	BOLT ASS'Y (SQUARE) M6X22	1	INCLUD. 43	
* 45	500-468Z	CORD	1	(CORD ARMOR D8.8)	
* 45	500-234Z	CORD	1	(CORD ARMOR D8.8) FOR INA	
* 45	500-423Z	CORD	1	(CORD ARMOR D8.8) FOR SIN, MAL	
* 45	500-435Z	CORD	1	(CORD ARMOR D8.8) FOR HKG	
46	322-578	SWITCH (1P PILLAR TYPE) W/LOCK	1		
47	322-505	HANDLE COVER	1		
48	941-056	SPRING	1		

PARTS

C 6MF

[illegible]

STANDARD ACCESSORIES

C 6MF

[illegible]

OPTIONAL ACCESSORIES


[illegible]

ELECTRIC TOOL PARTS LIST

■ CIRCULAR SAW Model C 7SF

2003 • 12 • 25

(E1)

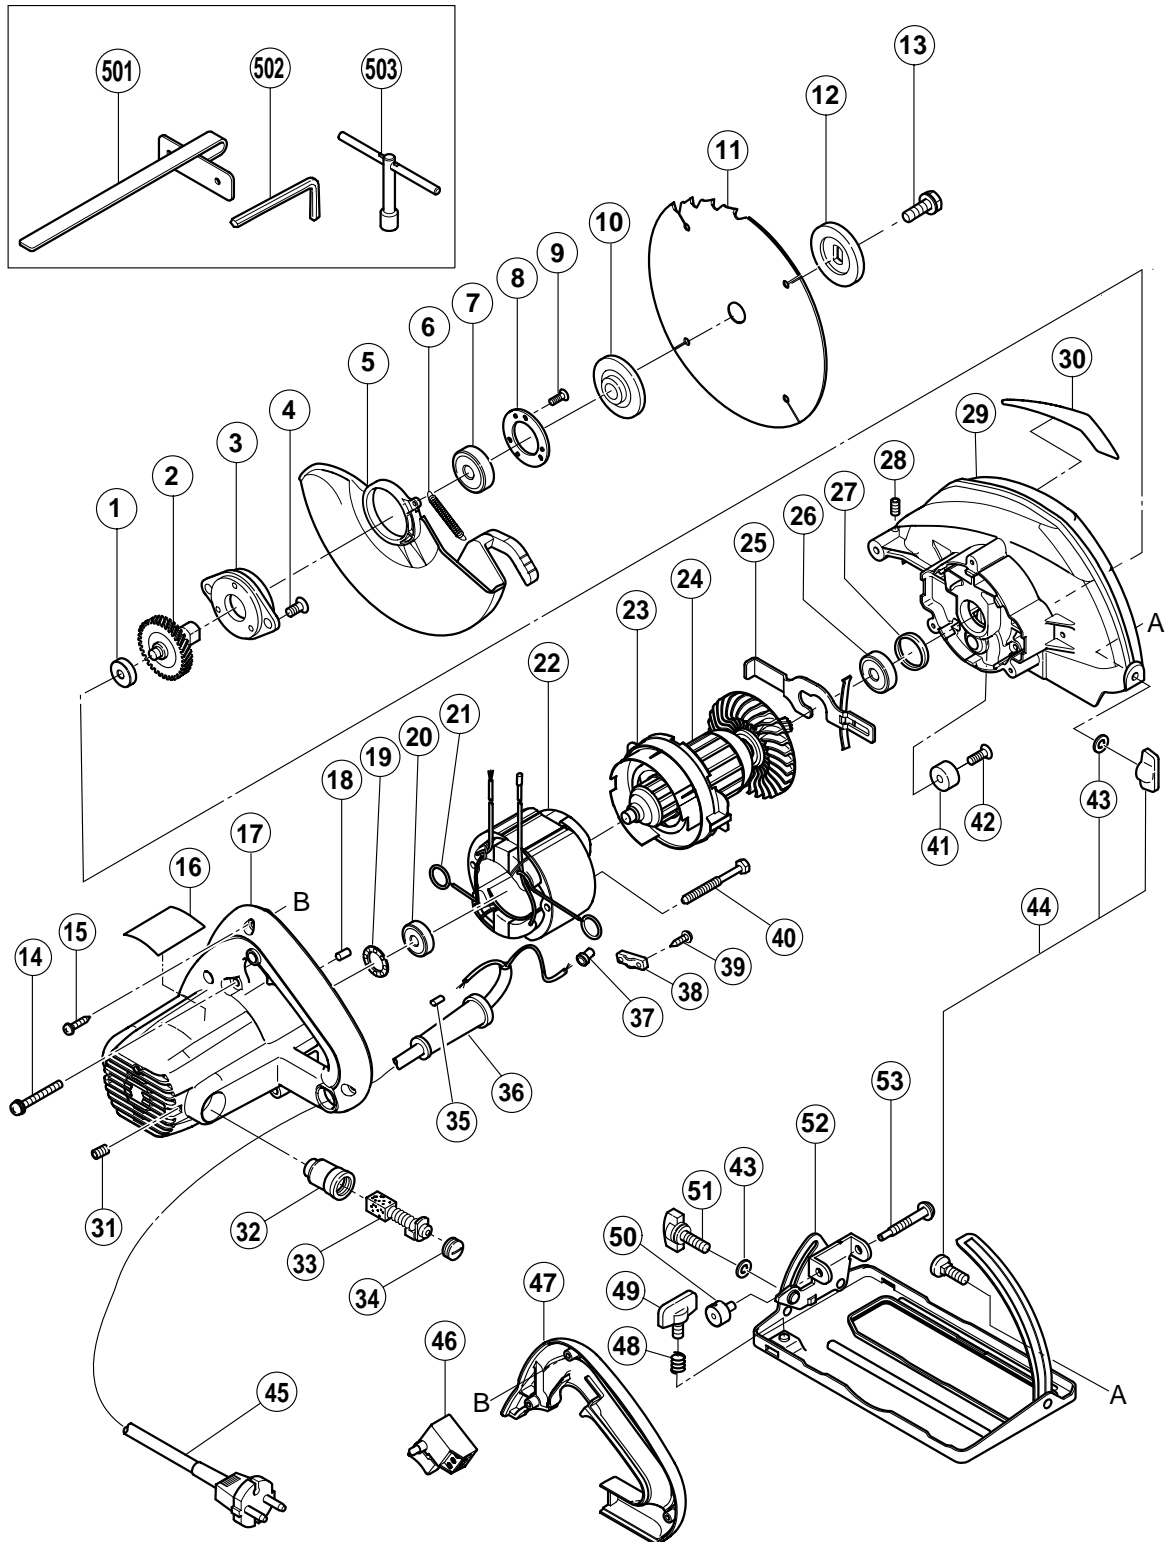

PARTS

C 7SF

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	963-803	METAL	1		
2	322-088	SPINDLE AND GEAR SET	1		
3	308-361	BEARING HOLDER	1		
4	305-568	SEAL LOCK FLAT HD. SCREW M5X12	2		
5	322-507	PROTECTIVE COVER	1		
6	317-203	RETURN SPRING	1		
7	600-2VV	BALL BEARING 6002VVCMP2L	1		
8	308-362	BEARING COVER	1		
9	308-773	SEAL LOCK FLAT HD. SCREW M3X12	3		
10	322-099	WASHER (A)	1		
11		TCT SAW BLADE 190MM-D20 HOLE-NT40	1		
12	322-100	WASHER (B)	1		
13	957-749	BOLT (W/WASHER) M7X17.5	1		
14	302-434	MACHINE SCREW (W/WASHERS) M5X45 (BLACK)	3		
15	301-653	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	3		
16		NAME PLATE	1		
17	322-504	HOUSING ASS'Y	1	INCLUD. 31, 32	
18	931-701	BEARING LOCK	1		
19	316-394	THRUST WASHER	1		
20	608-VVM	BALL BEARING 608VVC2PS2L	1		
21	930-703	BRUSH TERMINAL	2		
22	340-571E	STATOR ASS'Y 220V-230V	1	INCLUD. 21	
23	322-002	FAN GUIDE	1		
24	360-624E	ARMATURE 220V-230V	1		
25	307-918	LOCK LEVER	1		
26	600-0VV	BALL BEARING 6000VVCMP2L	1		
27	957-754	RUBBER RING	1		
28	962-782	HEX. SOCKET SET SCREW M5X6	1		
29	322-015	GEAR COVER ASS'Y	1	INCLUD. 27, 41, 42	
30		HITACHI LABEL	1		
31	938-477	HEX. SOCKET SET SCREW M5X8	2		
32	957-051	BRUSH HOLDER	2		
33	999-043	CARBON BRUSH (1 PAIR)	2		
34	935-829	BRUSH CAP	2		
35	981-373	TUBE (D)	1		
36	953-327	CORD ARMOR D8.8	1		
37	959-140	CONNECTOR 50091 (10 PCS.)	1		
38	937-631	CORD CLIP	1		
39	984-750	TAPPING SCREW (W/FLANGE) D4X16	2		
40	953-174	HEX. HD. TAPPING SCREW D5X55	2		
41	961-729	CUSHION	1		
42	949-794	FLAT HD. SCREW M6X20 (10 PCS.)	1		
43	948-167	SUPER LOCK WASHER M6	2		
44	314-620	BOLT ASS'Y (SQUARE) M6X22	1	INCLUD. 43	
* 45	500-468Z	CORD	1	(CORD ARMOR D8.8)	
* 45	500-234Z	CORD	1	(CORD ARMOR D8.8) FOR INA	
* 45	500-423Z	CORD	1	(CORD ARMOR D8.8) FOR SIN, MAL	
* 45	500-435Z	CORD	1	(CORD ARMOR D8.8) FOR HKG	
46	322-578	SWITCH (1P PILLAR TYPE) W/LOCK	1		
47	322-505	HANDLE COVER	1		
48	941-056	SPRING	1		

PARTS

C 7SF

[illegible]

STANDARD ACCESSORIES

C 7SF

[illegible]

OPTIONAL ACCESSORIES


[illegible]

ELECTRIC TOOL PARTS LIST

■ CIRCULAR SAW Model C 7MF

2003 • 12 • 25

(E1)

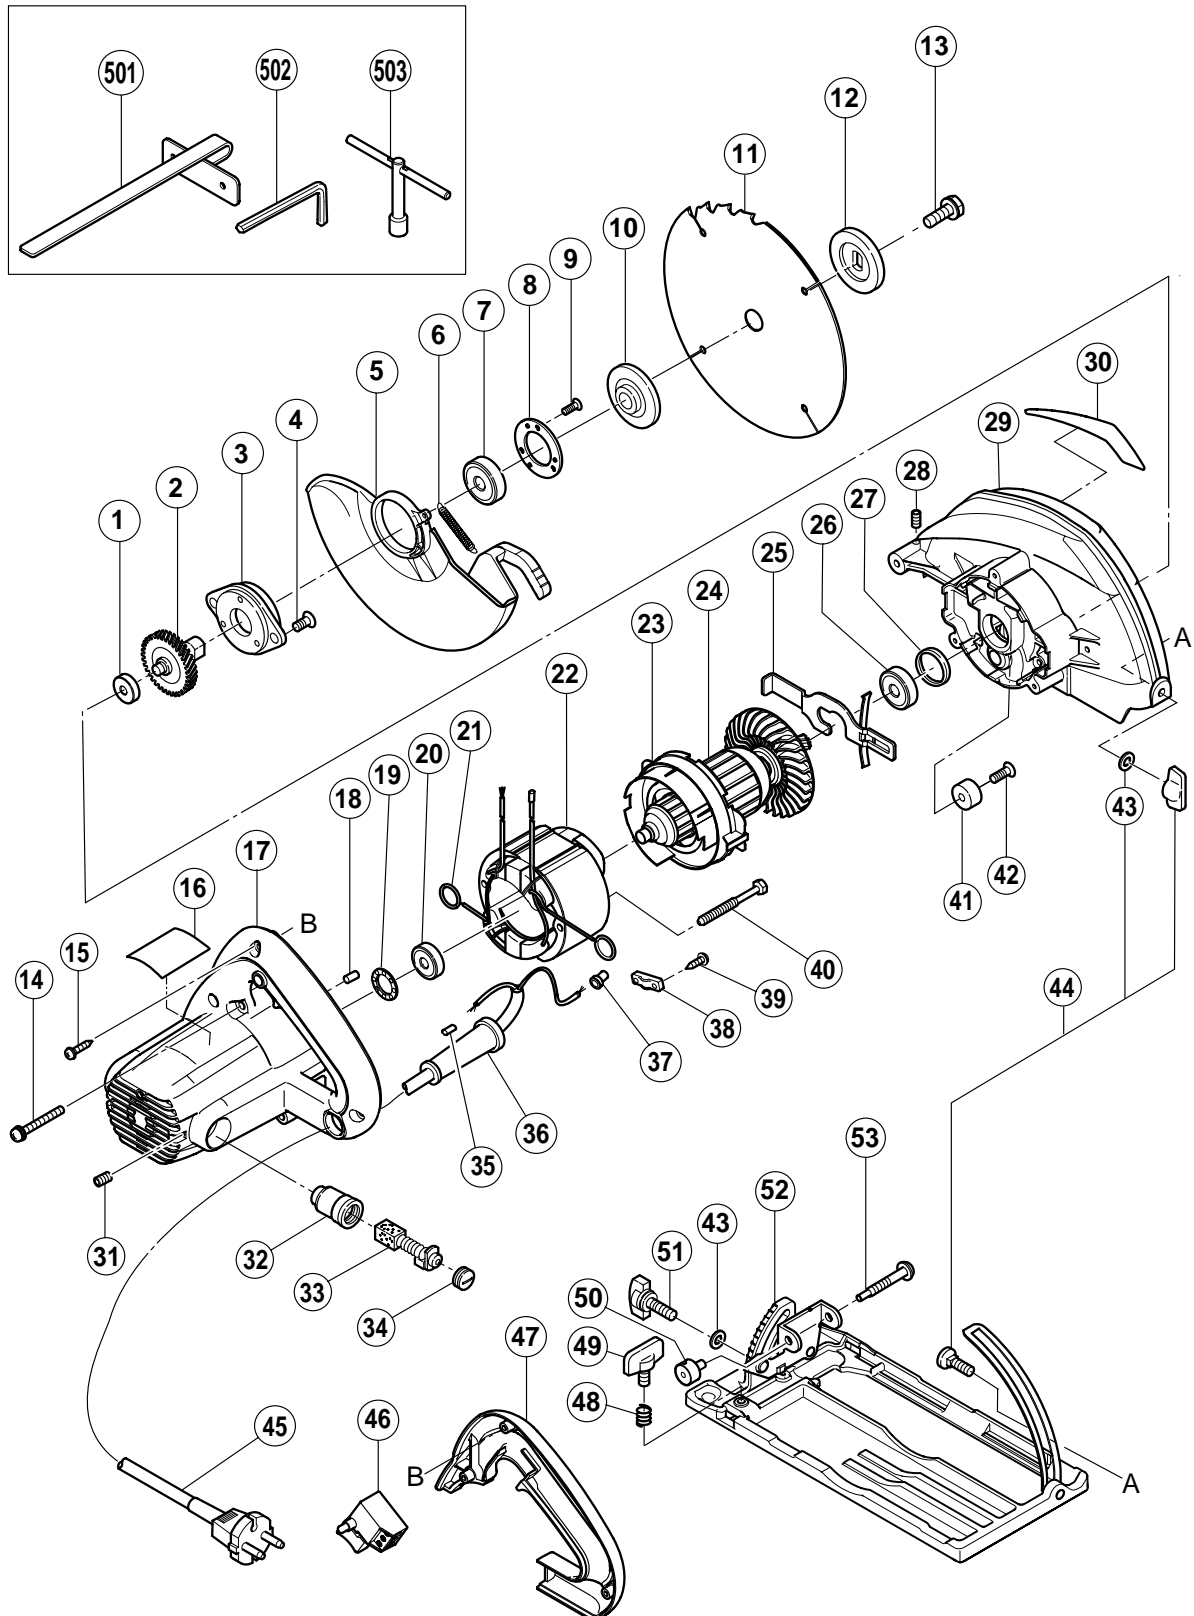

PARTS

C 7MF

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	963-803	METAL	1		
2	322-088	SPINDLE AND GEAR SET	1		
3	308-361	BEARING HOLDER	1		
4	305-568	SEAL LOCK FLAT HD. SCREW M5X12	2		
5	322-507	PROTECTIVE COVER	1		
6	317-203	RETURN SPRING	1		
7	600-2VV	BALL BEARING 6002VVCMP2L	1		
8	308-362	BEARING COVER	1		
9	308-773	SEAL LOCK FLAT HD. SCREW M3X12	3		
10	322-099	WASHER (A)	1		
11		TCT SAW BLADE 190MM-D20 HOLE-NT40	1		
12	322-100	WASHER (B)	1		
13	957-749	BOLT (W/WASHER) M7X17.5	1		
14	302-434	MACHINE SCREW (W/WASHERS) M5X45 (BLACK)	3		
15	301-653	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	3		
16		NAME PLATE	1		
17	322-504	HOUSING ASS'Y	1	INCLUD. 31, 32	
18	931-701	BEARING LOCK	1		
19	316-394	THRUST WASHER	1		
20	608-VVM	BALL BEARING 608VVC2PS2L	1		
21	930-703	BRUSH TERMINAL	2		
22	340-571E	STATOR ASS'Y 220V-230V	1	INCLUD. 21	
23	322-002	FAN GUIDE	1		
24	360-624E	ARMATURE 220V-230V	1		
25	307-918	LOCK LEVER	1		
26	600-0VV	BALL BEARING 6000VVCMP2L	1		
27	957-754	RUBBER RING	1		
28	962-782	HEX. SOCKET SET SCREW M5X6	1		
29	322-015	GEAR COVER ASS'Y	1	INCLUD. 27, 41, 42	
30		HITACHI LABEL	1		
31	938-477	HEX. SOCKET SET SCREW M5X8	2		
32	957-051	BRUSH HOLDER	2		
33	999-043	CARBON BRUSH (1 PAIR)	2		
34	935-829	BRUSH CAP	2		
35	981-373	TUBE (D)	1		
36	953-327	CORD ARMOR D8.8	1		
37	959-140	CONNECTOR 50091 (10 PCS.)	1		
38	937-631	CORD CLIP	1		
39	984-750	TAPPING SCREW (W/FLANGE) D4X16	2		
40	953-174	HEX. HD. TAPPING SCREW D5X55	2		
41	961-729	CUSHION	1		
42	949-794	FLAT HD. SCREW M6X20 (10 PCS.)	1		
43	948-167	SUPER LOCK WASHER M6	2		
44	314-620	BOLT ASS'Y (SQUARE) M6X22	1	INCLUD. 43	
* 45	500-468Z	CORD	1	(CORD ARMOR D8.8)	
* 45	500-234Z	CORD	1	(CORD ARMOR D8.8) FOR INA	
* 45	500-423Z	CORD	1	(CORD ARMOR D8.8) FOR SIN, MAL	
* 45	500-435Z	CORD	1	(CORD ARMOR D8.8) FOR HKG	
46	322-578	SWITCH (1P PILLAR TYPE) W/LOCK	1		
47	322-505	HANDLE COVER	1		
48	941-056	SPRING	1		

PARTS

C 7MF

[illegible]

STANDARD ACCESSORIES

C 7MF

[illegible]

OPTIONAL ACCESSORIES

[illegible]

