
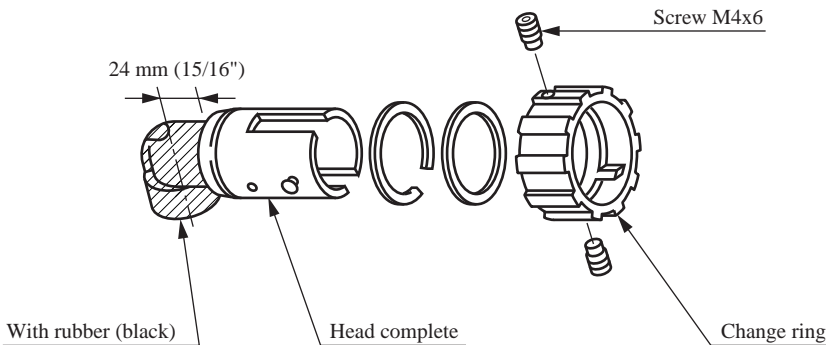


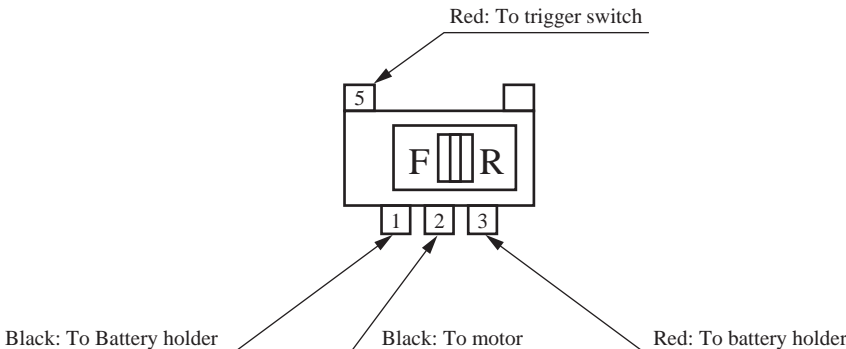
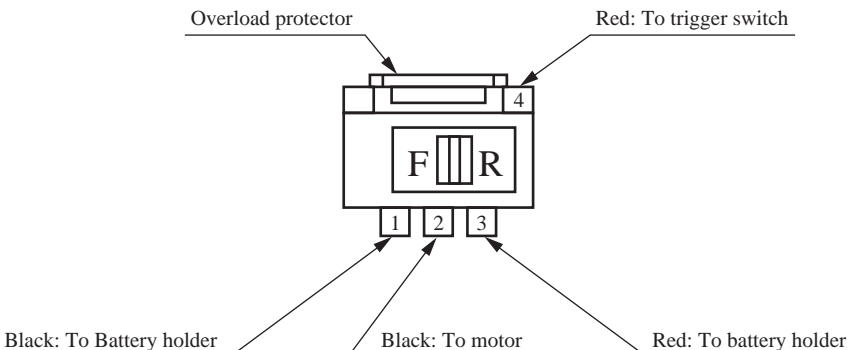
**Subject** ► Change on head complete, change ring, etc.

**For Models** ► 6702D/DW (Cordless Angle Socket Driver)

**Description** ► 1. The head complete and the change ring will be changed as follows.

<p>► <b>Current</b></p> <p>The torque can be adjusted in 5 stages (20 kg.cm - 80 kg.cm; 1.4ft.lbs - 5.8 ft.lbs).</p>	
<p>► <b>New</b></p> <p>The torque can be infinitely adjusted from 20 kg.cm - 80 kg.cm(1.4 ft.lbs - 5.8 ft.lbs).</p>	

2. The reversing switch will be changed. The new type switch will have an overload protector.

<p>► <b>Current</b></p> 	<p>► <b>New</b></p> 
--	--

3. The housing (R) will be changed as follows.

- 1) The rib will be changed in shape.
- 2) A boss will be added.



### Interchangeability(I/C)

Item No.	Current part		Q'ty	I/C	New part		Q'ty	Note
10	Head complete 152402-7		1	No	Head complete 152444-1		1	Interchangeable as a set
13	Change ring 414757-1		1	No	Change ring 415444-5		1	
52					Screw M4x6 266025-6		2	
1	Housing set 182441-3		1	<=	Housing set 182441-3		1	Interchangeable as a set
2	Switch 651889-5		1	No	Switch 651872-2		1	

### Note

<= mark indicates that the new type part can be substituted for the current type part.

### Implementation

6702D : From serial No. 503633E  
6702DW : From serial No. 6121E