



- Subject** ▶ Change on method of installing the vise screw
- For Models** ▶ 5500S (Tenoning Machine)
- Description** ▶ The method of installing the vise screw will be changed follows.

## ► Current

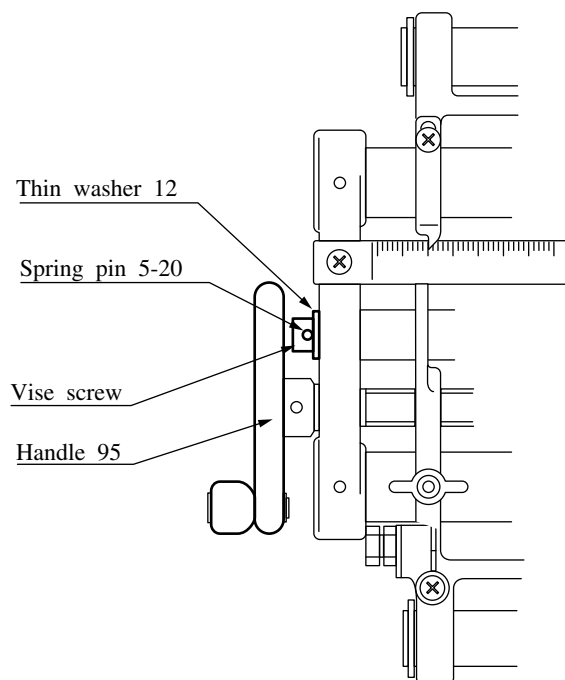

## ► New

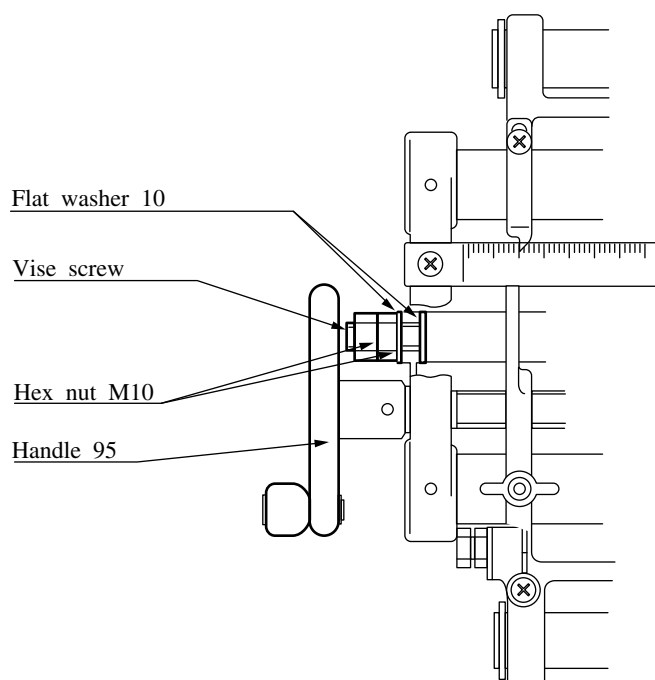

## Interchangeability(I/C)

Item No.	Current part		Q'ty	New part		Q'ty	I/C	Note
132	Thin washer 12 253312-2		0-3					Interchangeable as a set
142	Spring pin 5-20 951163-4		1					
211				Hex nut M10 931502-4		2		
210				Flat washer 10 253878-2		2		
131	Vise screw 321157-7		1	Vise screw 322682-1		1	No	
148	Handle 95 271028-7		1	Handle 95 271060-1		1	<=	

## Note

Interchangeability mark : <= mark indicates that the new type part can be substituted for the current type part.

## Implementation

From the serial No. 3213E