

TECHNICAL INFORMATION



67072

Subject	▶ Change of DC Motor
For Models	▶ 6010D, 6012D, 6015D, 6070D, 6071D, 6072D, DA301D, DA3000D, M002, M003, M014
Country	▶ All countries
Description	▶ DC Motor has been changed as shown below.

▶ Current	▶ New

Interchangeability(I/C)

Item No.	Current part	Q'ty	I/C	New part	Q'ty	Note
↑ See note below. ↓	DC Motor 629514-6	1	No	DC Motor 629801-3	1	For DA301D, DA3000D. See note below.
	DC Motor 629514-6	1		DC Motor 629801-3	1	For all subject models except DA301D, DA3000D

Interchangeability mark ;

The arrow ← means that the new part can be substituted for the current.


Note

Item No. of DC Motor

Model	6010D	6012D	6015D	6070D	6071D	6072D	DA301D	DA3000D	M002	M003	M014
Item No.	005	017	017	005	005	018	010	010	005	005	005

For DA301D, DA3000D only

When installing new DC Motor on DA301D or DA3000D, always remove the ribs of Housings R and L shown below.

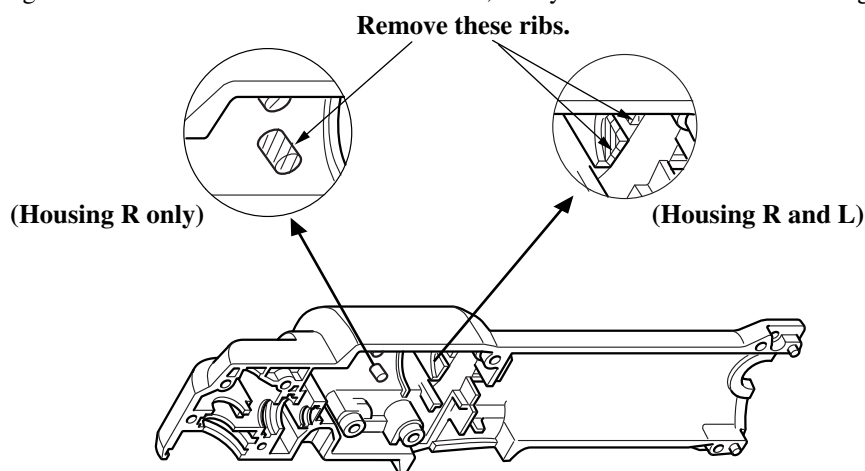

Implementation

6010D: To be informed later
 6012D: Discontinued since May, 2001
 6015D: To be informed later
 6070D: Discontinued since Jan., 1993
 6071D: Discontinued since Oct., 2000
 6072D: Discontinued since Oct., 1999

DA301D: To be informed later
 DA3000D: Discontinued since Oct., 1993
 M002: Discontinued since May, 1991
 M003: Discontinued since Apr., 1993
 M014: Discontinued since May, 1991